

FRWAY TWO ARRIVAL (RNAV)

PALM BEACH APP CON
124.6 317.4

AYBID TRANSITION (AYBID.FRWAY2):
ORMOND BEACH TRANSITION (OMN.FRWAY2):
VERO BEACH TRANSITION (VRB.FRWAY2):
 From over FRWAY WP via 221° track to TUNNE WP, thence as depicted to CASKI WP.

LOST COMMUNICATIONS: Continue track to CASKI WP then turn left direct PBI VORTAC direct CUPED WP and hold. Maintain 3,000.

NOTE: For non-GPS equipped aircraft, OMN and VRB Transitions, PHK and PBI must be operational; AYBID transition-PHK, PBI, and VRB must be operational.

NOTE: Aircraft landing North Palm Beach County General Aviation (F45) via AYBID Transition only.

NOTE: RNAV 1.


NOTE: RADAR Required.

NOTE: Turbojet/Turboprop Aircraft Only.

NOTE: DME/DME/IRU or GPS Required.

SE-3, 03 JUL 2008 to 31 JUL 2008

SE-3, 03 JUL 2008 to 31 JUL 2008

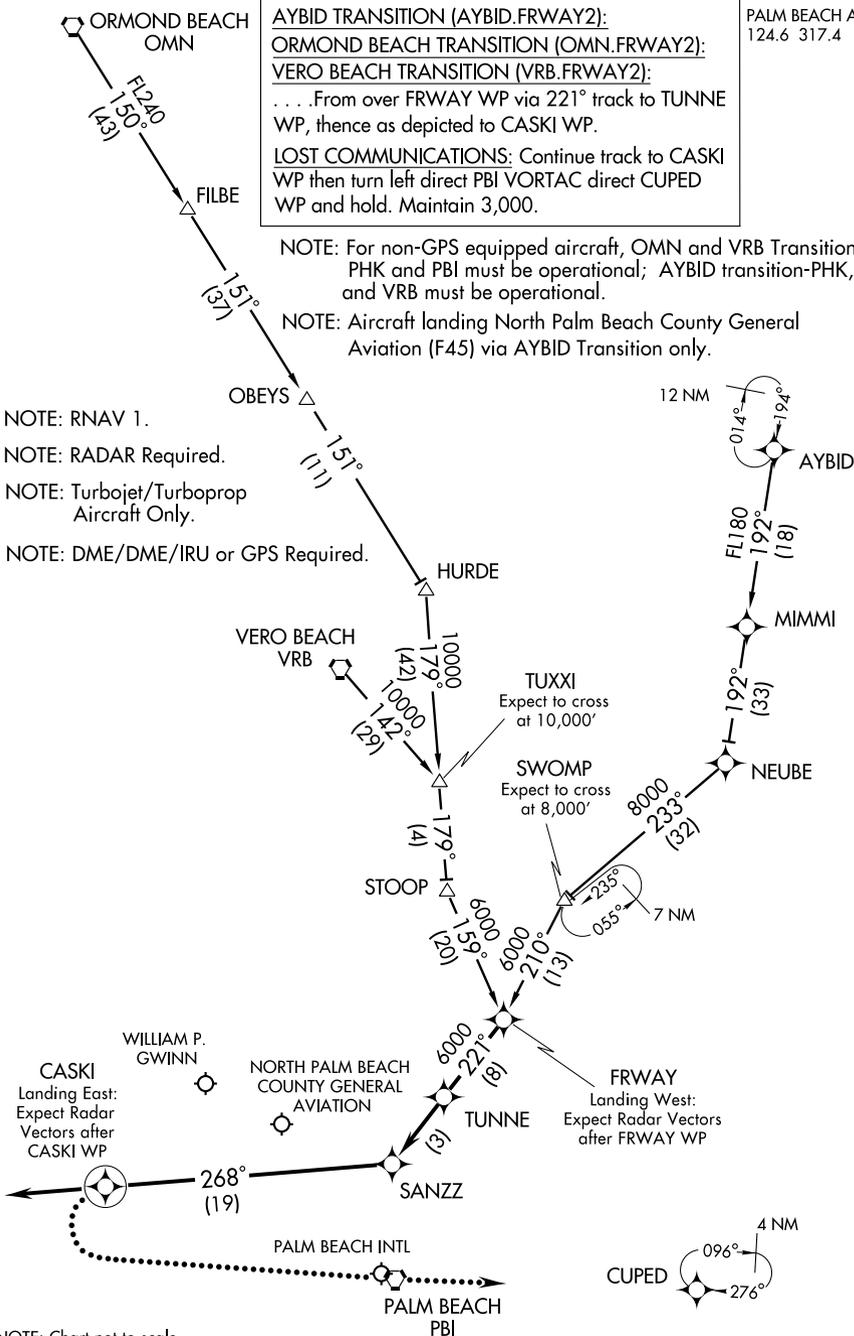

FRWAY TWO ARRIVAL (RNAV)