


VOR/DME SFO	APP CRS	Rwy Idg	N/A
115.8	101°	TDZE	N/A
Chan 105		Apt Elev	13

VOR or GPS-B
SAN FRANCISCO INTL (SFO)

⚠

MISSED APPROACH: Climb to 2100 via SFO R-101 to
BRIJ Int/LOM and hold.

ATIS 113.7 115.8 118.85 135.45	NORCAL APP CON 134.5 338.2	SAN FRANCISCO TOWER 120.5 269.1	GND CON 121.8	CLNC DEL 118.2
--------------------------------------	-------------------------------	------------------------------------	------------------	-------------------

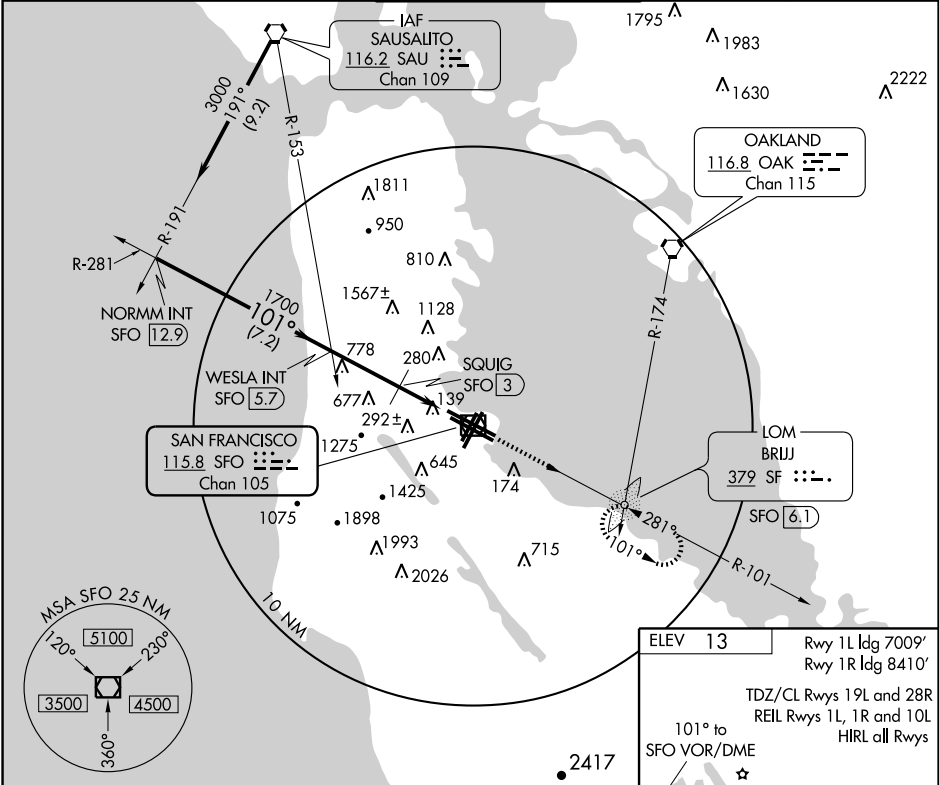

Procedure Turn NA	NORMM INT SFO 12.9 3000			WESLA INT SFO 5.7 1700			SQUIG SFO 3 1080			VOR/DME		
	101°			1700			1080			2100 SFO R-101		
	7.2 NM			2.7 NM			3 NM			SF 379		
CATEGORY	A			B			C			D		
CIRCLING	1080-1¼ 1067 (1100-1¼)			1080-1½ 1067 (1100-1½)			1080-3 1067 (1100-3)			1260-3 1247 (1300-3)		
DME MINIMA												
CIRCLING	760-1 747 (800-1)			940-1¼ 927 (1000-1¼)			1040-3 1027 (1100-3)			1260-3 1247 (1300-3)		

